Whitehall
HANDCRAFTED SINCE 1941

Customer Service: 800-728-2164
Online: www.whitehallproducts.com

Product Name: Bat Cast Metal Weathervane
Product Number: 60122
Assembled Dimensions: 72” x 17.5” x 15.5”

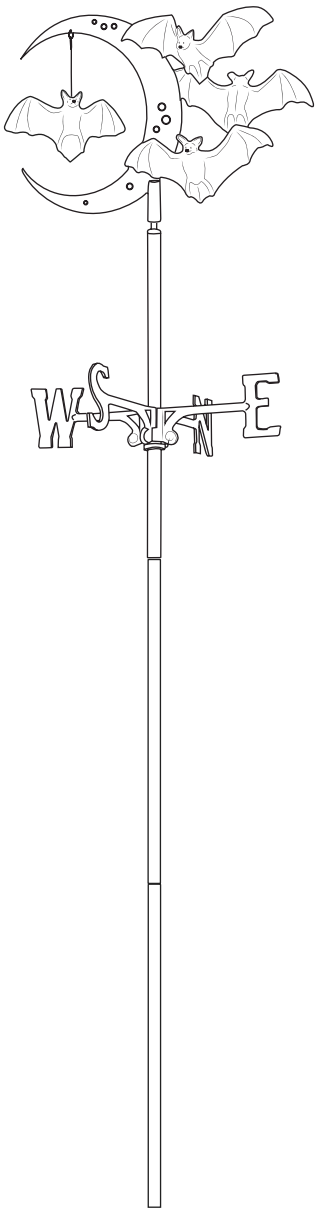

Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

MADE IN USA

⚠ Assemble in location for intended use.

Ltr.	Qty.	Description	Hardware Included
A	1	Directional Support Ring	
B	1	Set Screw For Directional Support Ring	#6-32 x 1/2 Flat Head Screw
C	1	Set Screw For Directionals	#10-24 x 7/16 Truss Screw
D	1	Key Ring	
E	1	Double Loop Bat Hanger Line	
F	1	Screw for bat	#6-32 x 5/16 Truss Screw

REQUIRED TOOLS:
Rubber Mallet
Phillips Screwdriver

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

ASSEMBLY TIME: Approx. 10 MINS

Ltr.	Qty.	Components
G	1	Bat Ornament
H	1	Bat and Moon Weathervane
I	1	North / South Directional
J	1	East / West Directional
K	1	Mast Section with Pin
L	2	Mast Section With Crimped End

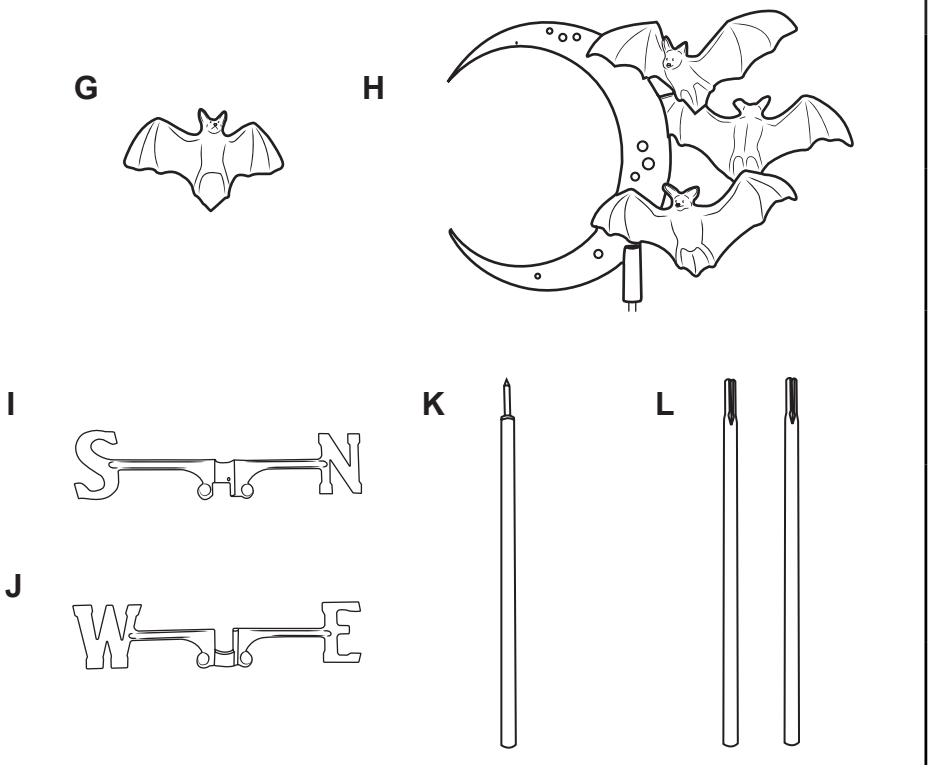

STEP 1: Using a rubber mallet, hammer mast section with crimped end (L) into ground with crimped end facing up 6-8 inches deep. Ensure mast section is plumb and upright. Add additional mast section with crimped end (L) to previous mast section, with crimped end facing up. Follow by adding last mast section with pin (K) to previous mast sections.

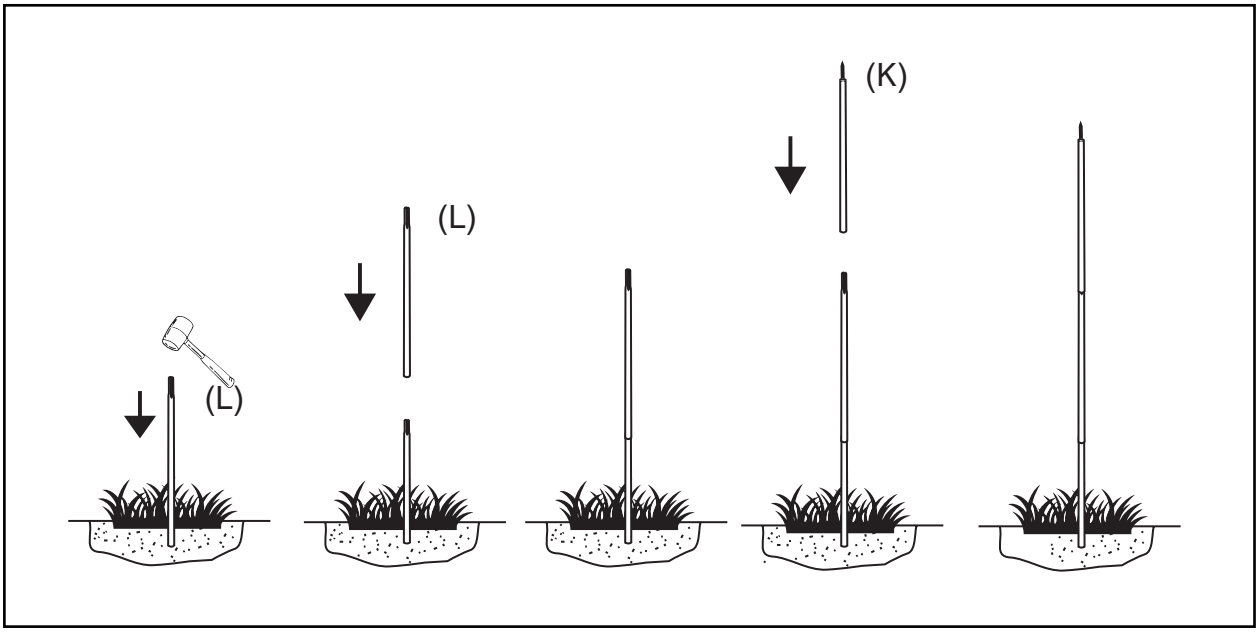

STEP 2: Locate directional support ring (A) and thread the set screw (B) into the threaded hole. Next, slide the directional support ring (A) over the mast approximately 12 inches below the top pin and tighten set screw with a Phillips screwdriver.

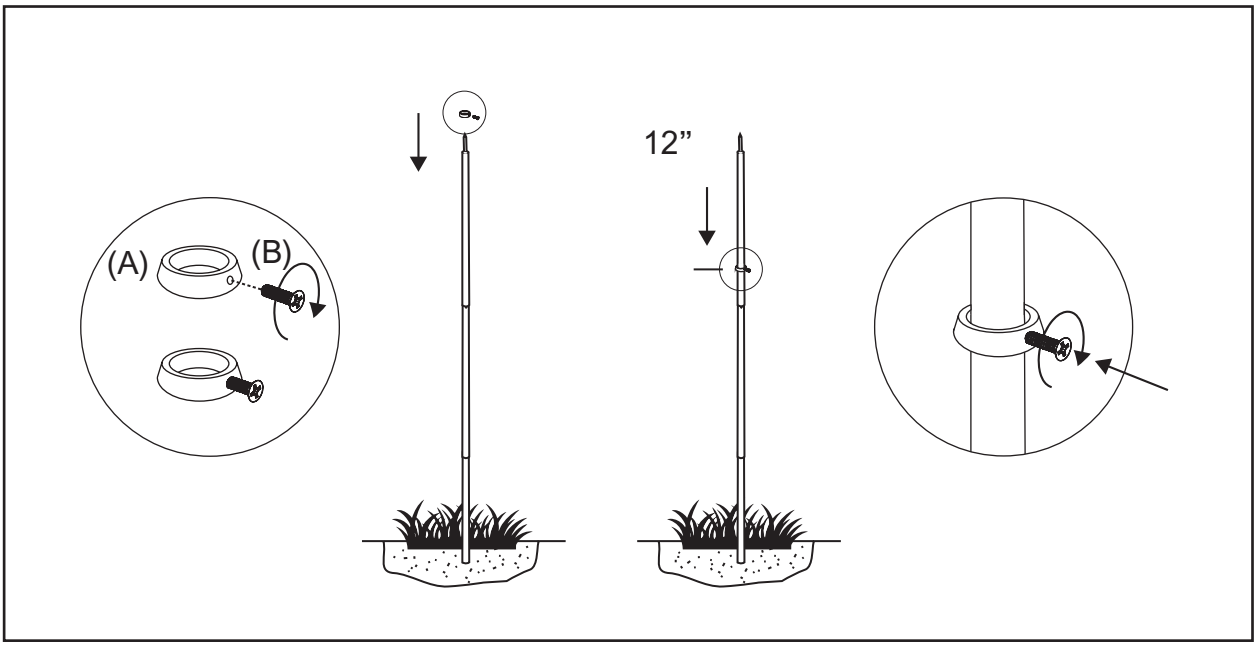

STEP 3: Slide the east/west directional piece (J) over the mast until the bottom rests on the directional support ring. Slide the north/south directional piece (I) over the mast until it interlocks with the east/west directional piece. Rotate the directional assembly until the “N” is pointing north and then secure the set screw (C) with a Phillips screwdriver. Do not overtighten.

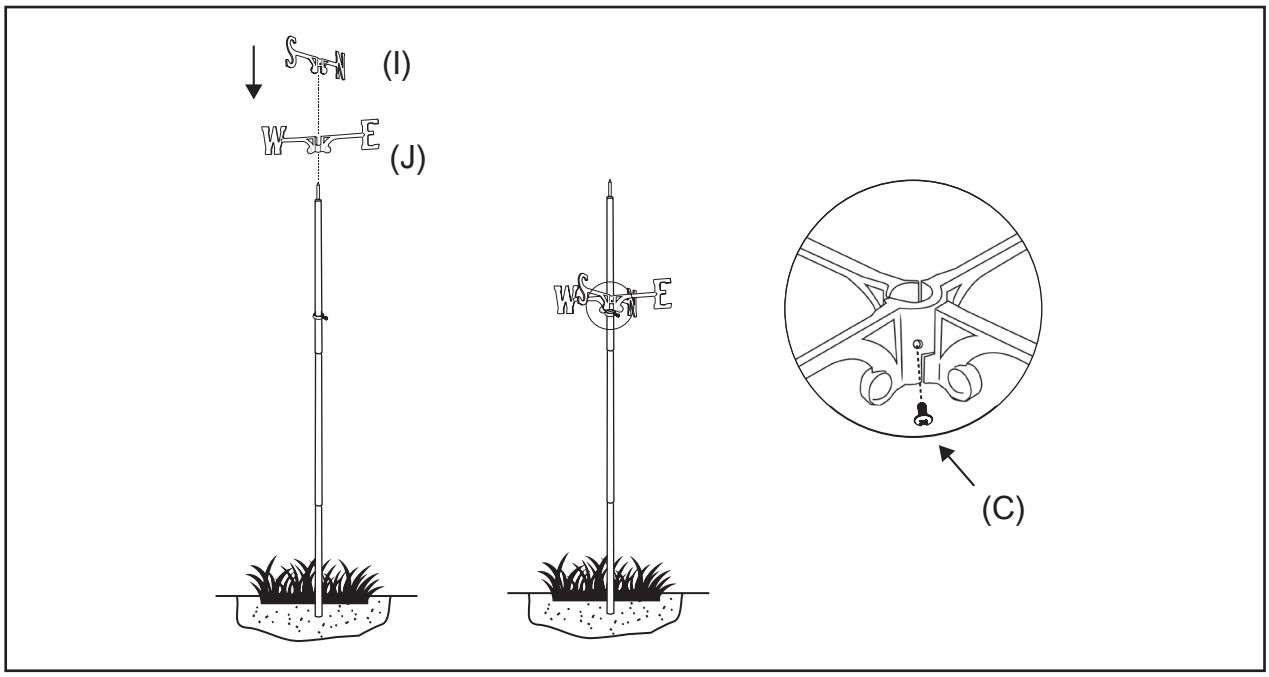

STEP 4: Attach the key ring (D) to one loop of the bat hanger line (E). Insert the key ring through the hole at the top of the crescent moon on the bat-and-moon weathervane (H). Place the weathervane face down on a clean, padded surface. Insert screw (F) through the remaining loop of the hanger line and into the threaded hole on the back of the bat ornament (G). Tighten with a Phillips screwdriver.

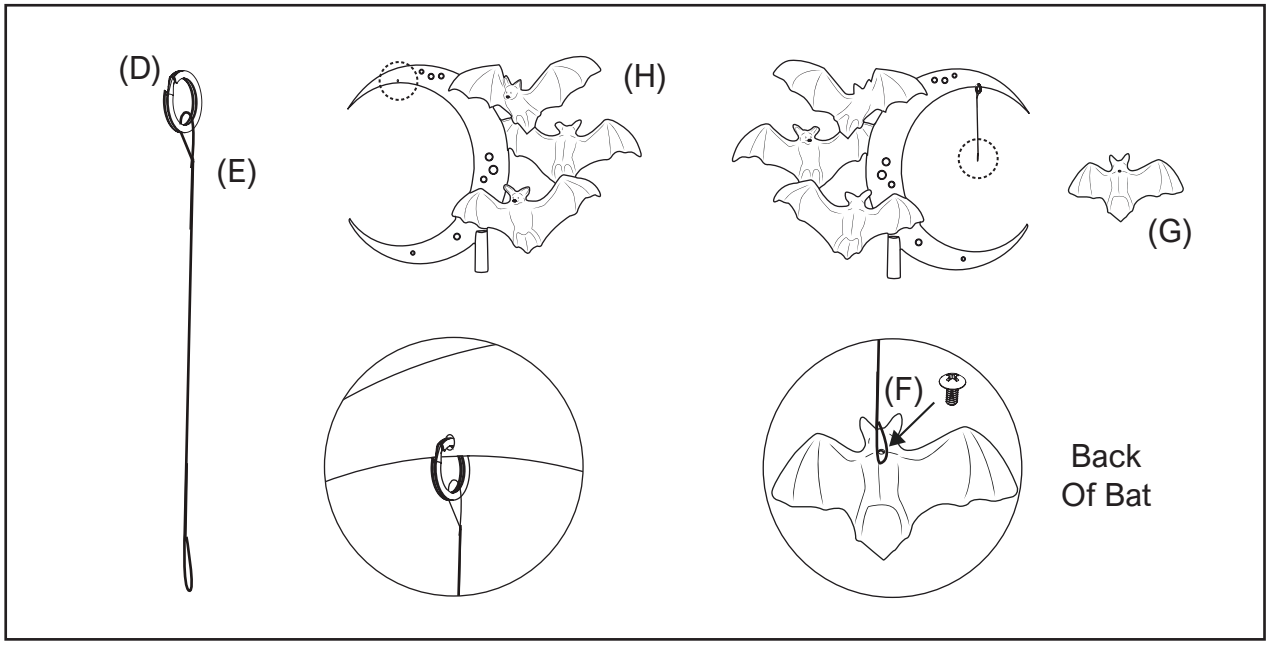

STEP 5: Place the assembled bat-and-moon weathervane (H) onto the pin at the top of the mast. If needed, re-adjust the location of bat ornament by unscrewing and flipping around the double loop bat hanger line and re-screwing it into the same threaded hole on the back of the bat to hang straight.

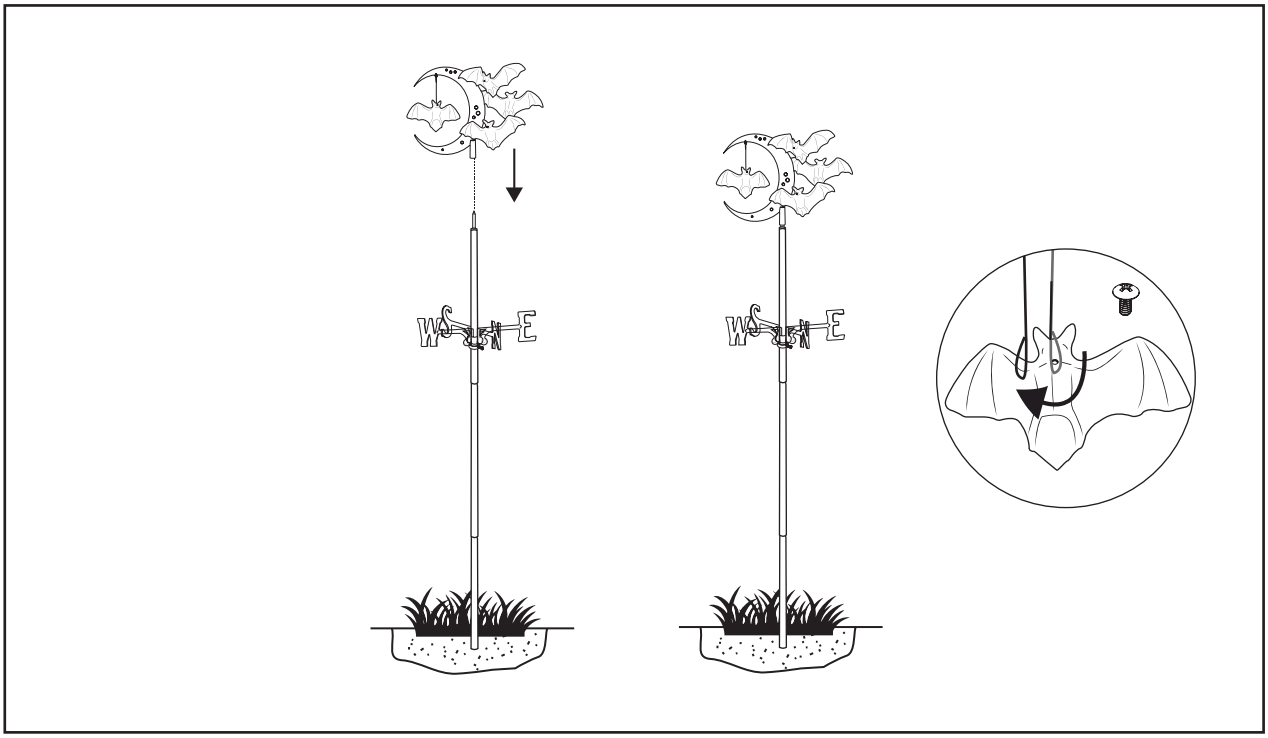

Care Instructions:
Clean the weathervane by using water and a soft rag. Do not use harsh detergents or abrasives as this may damage the painted finish.

Please contact our Customer Service for assembly assistance or questions at 1-800 - 728 - 2164 or
email customerservice@whitehallproducts.com
Available weekdays 8:30am to 5:00pm EST